WARNING: DISCONNECT POWER AT THE MAIN FUSE BOX BEFORE INSTALLATION.

WARNING:

This fixture is intended for installation in accordance with the National Electrical Code (NEC) and all local code specifications. If you are not familiar with code requirements, installation by a certified electrician is recommended.

Before assembly, remove all parts and part packages from box. If anything is missing, please contact the retailer from which the product was purchased.

- 1. Carefully pull house wires out of junction box so they are easily accessible during installation.
- 2. Position mounting bracket (A) so the head of the attached ground screw is pointing down towards floor.
- 3. Place mounting bracket (A) up against junction box. Align each slot in mounting bracket (A) with each hole in junction box.
- 4. Thread one junction box screw (B) into each slot in mounting bracket (A) and into holes in junction box. Tighten junction box screws (B) to secure mounting bracket (A) to junction box.


CAUTION: Make sure house wires are still easily accessible. **DO NOT** pinch wires between mounting bracket and ceiling.

NOTE: The length of the cord must be adjusted before fixture is installed.


- 5. Pass end of fixture wires through hole in center of canopy (D).
- 6. Hold canopy (D) against ceiling to determine desired hanging height of fixture.
- 7. The length of the cord must be adjusted before fixture is installed. Hold canopy (D) against ceiling to determine desired hanging height of fixture.
- Loosen set screw on strain relief (V) with hex wrench (W). DO NOT completely remove set screw. Move cord up or down to achieve desired length. Position strain relief (V) up against canopy (D). Tighten set screw on strain relief (V) to secure cord.



ITEM#: 25102/1

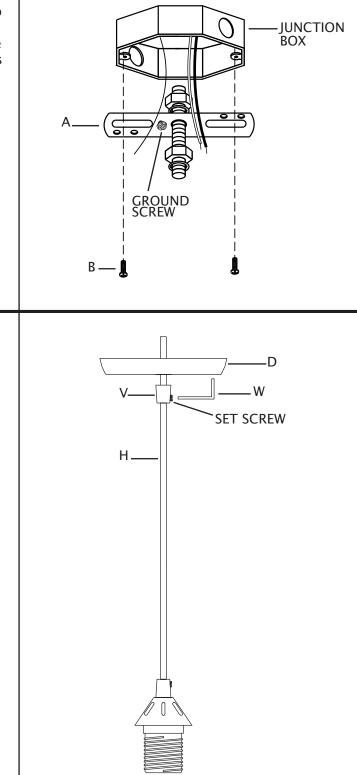

ITEM#: 25102/1

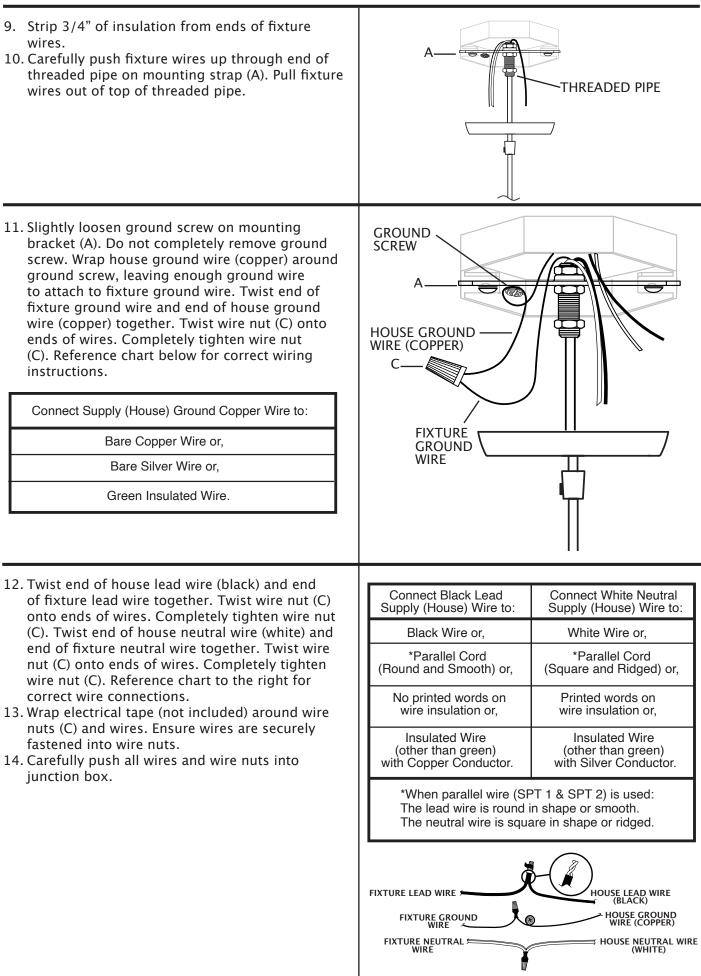

ITEM#: 25102/1

- 15. Loosen set screw on strain relief (V). Slide strain relief (V) down cord (H).
- 16. Raise canopy (D) up to ceiling. Pass hole in center of canopy (D) over end of threaded pipe on mounting strap (A).
- 17. Thread strain relief (V) onto end of threaded pipe. Tighten strain relief (V) to secure canopy up against ceiling. Tighten set screw on strain relief (V).
- 18. Raise shade (K) up to fixture. Pass hole in top of shade (K) over socket. Thread socket ring (L) onto socket. Tighten socket ring (L) to secure shade (K) in place. DO NOT over tighten.
- 19. Screw recommended bulb (E26 Edison bulb type, not included) into socket. Verify correct bulb wattage marked on socket of fixture. **WARNING:** DO NOT exceed maximum bulb wattage.

